



Assembled furniture is large & very heavy. Put together at place of use.


# Evo Woven Modular Collection Component Assembly Instructions

360910SC Corner      360910MR Right Side  
360910MC Middle      360910ML Left Side

Congratulations on your purchase of the Evo Woven Collection. Read through all steps before fastening components together.

**CAUTION:** Do not try to lift or flip furniture components with only one person. Components may be heavy and awkward to handle, and may result in injury to persons or damage to property if not lifted properly.

**CAUTION:** DO NOT REMOVE OR LIFT FURNITURE BY THE BLACK STRAPS. THESE ARE USED FOR CUSHION CONNECTION!

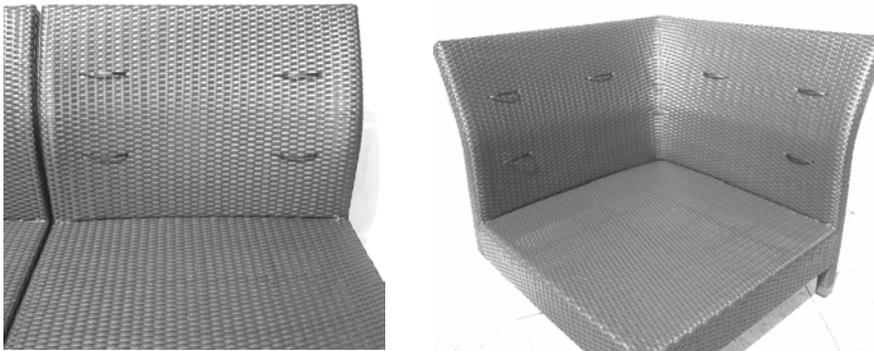

*Shown without cushions installed.*

## Tools Required

5/32" Hex Key (Allen Wrench)  
1" wood spacer about 3" long

Safety Glasses

## Middle, Left Side and Right Side Module Parts List


- |                         |                  |
|-------------------------|------------------|
| (2) Connecting Brackets | (1) Seat Cushion |
|                         | (1) Back Cushion |



Connecting Bracket

## Corner Module Parts List

- |                                |                        |
|--------------------------------|------------------------|
| (2) Connecting Brackets        | (1) Seat Cushion       |
| (1) Corner Bracket, Left Side  | (1) Long Back Cushion  |
| (1) Corner Bracket, Right Side | (1) Short Back Cushion |

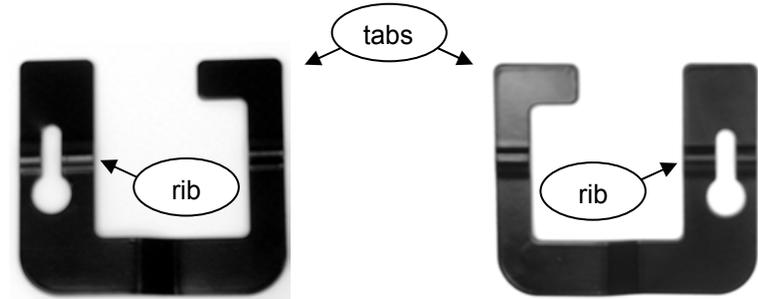

Corner Bracket, Left  
(while seated)

Corner Bracket, Right  
(while seated)

- ✓ Check that all items listed in the Parts List are in your carton.
- ✓ You may have extra brackets when assembly is completed depending upon the configuration.
- ✓ Left Side and Right Side Module designation is when seated.

## Step 1

Components can be assembled in upright position by reaching under frame members. Proceed to next step.


OR

Prepare a smooth, non-scratch surface (a tarp or pool towels can be placed on your work surface) so the components can be placed side-by-side for assembly. With two persons, tilt the components onto their side to allow access to the bottom of the pieces. Insure flat side surfaces are down for stability and the helper is holding the furniture components stable.

**NOTE:** If three (3) or more components are being fastened together, the components should be assembled in an upright orientation. This is especially critical when components are being assembled into a non-linear configuration.


## Step 2

Identify points to attach (A) Connecting Brackets and (B) Corner Brackets (Left & Right) in your configuration (see example).

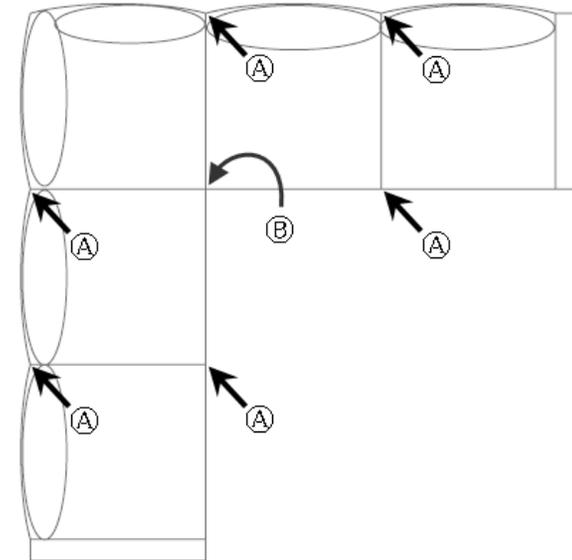

### Step 3 **A** Connecting Brackets

- ① Hang the Connector Bracket on one bolt with the two ribs facing the bolt heads (to the inside of the module - up in this photo).
- ② Squeeze the legs firmly together by hand. Rotate the Connector Bracket and connect to the other bolt. You may need to loosen this second bolt a few turns with the 5/32" Hex Key.
- ③ Place the 1" wood spacer between the Connector Bracket and the woven frame so the bracket won't move out of position during tightening. Tighten both bolts firmly; the bolt heads must remain above the ribs.

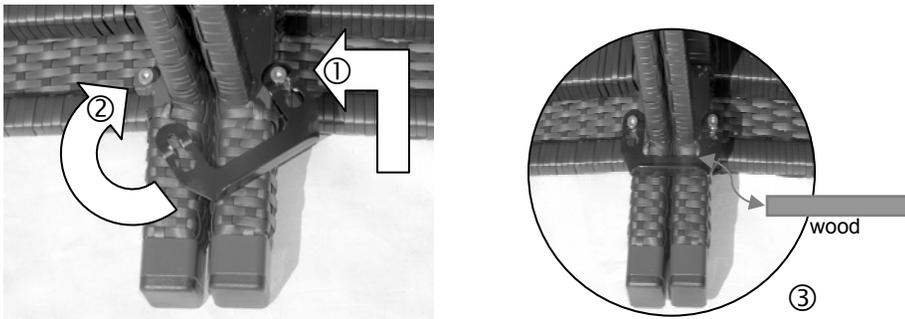


Remove the wood spacer.

### Step 4

Repeat Step 3 for the front and/or the back for each furniture component until all **A** Connecting Brackets are attached.

### Step 5 **B** Corner Module Brackets only

- ① Hang the Corner Bracket tab over the Corner Module frame member. **Notice:** Either the Left or Right bracket will face the rib to the bolt head (to the inside of the module - up in this photo).
- ② Squeeze the legs firmly together by hand. Rotate the Connector Bracket and connect to the bolt. You may need to loosen this bolt a few turns with the 5/32" Hex Key.
- ③ Tighten the bolt firmly; don't let the bracket move out of position during tightening. The bolt head must remain above the rib.

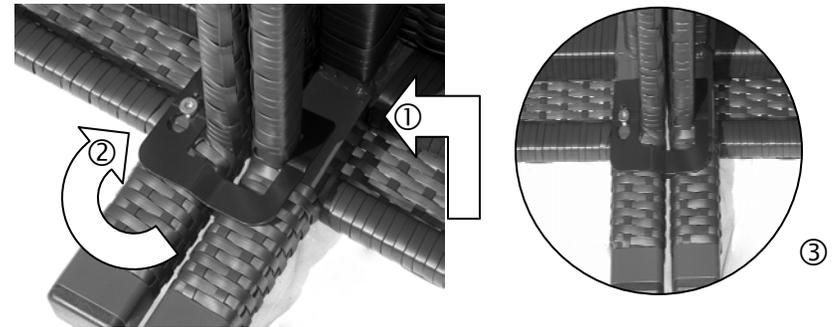

### Step 6 Corner Module in "L" configuration only

If the Corner Module will connect to another module in an "L" configuration, repeat step 5 for the second bracket.

## Step 7

If components are in upright position, proceed to next step.

OR

Your furniture should now be fully assembled and ready to tilt into an upright position. It is especially critical two or more persons tilt assembled furniture into the upright position to prevent injury or damage to furniture.

## Step 8

**CAUTION:** DO NOT REMOVE OR LIFT FURNITURE BY THE BLACK STRAPS USED FOR CUSHION CONNECTION!

Place the seat cushions with zipper to the back onto each furniture component. Wrap the seat cushion straps around the two lower black straps and Velcro® closed.

Place the back cushions with zippers down onto each furniture component. For the Corner Module, install the Long Back Cushion before the Short Back Cushion. Wrap the back cushion straps around the upper black straps and Velcro® closed.



(4) Black Cushion Mounts  
Middle, Left or Right Side

Cushion installation order:

- 1<sup>st</sup> Seat Cushion
- 2<sup>nd</sup> Back Cushion



(6) Black Cushion Mounts  
Corner Module

Cushion installation order:

- 1<sup>st</sup> Seat Cushion
- 2<sup>nd</sup> Long Back Cushion
- 3<sup>rd</sup> Short Back Cushion

Add the optional throw pillows, then enjoy!



For additional assembly and product care instructions such as fabric and woven care, see [www.tropitone.com](http://www.tropitone.com) and select Product Care.

- ✓ Safety, Care, Maintenance and Warranty Information

If you have difficulty understanding any of the instructions and need assistance while fastening your components together, please call Tropitone's Customer Service Center at 949-951-2010.

Tropitone Furniture Co., Inc.  
5 Marconi, Irvine, CA 92618

949 951 2010 phone  
[www.tropitone.com](http://www.tropitone.com)

Part # R9TEVOWOV  
Revised: 101909  
©2009 Tropitone Furniture Co., Inc.