



## Cabana Club Fabric & Woven Panel Assembly Instructions

Congratulations on the purchase of your Tropitone Cabana Club modular seating with Panels. Read through all steps before attaching panels.

**CAUTION:** Do not try to lift or flip components with only one person. Components may be heavy and awkward to handle, and may result in injury to persons or damage to property if not lifted properly.

For additional Cabana Club assembly and product care instructions, see [www.tropitone.com](http://www.tropitone.com) and select Product Care.

- ✓ Cabana Club Cleaning and Care
- ✓ Cabana Club Component Assembly Instructions
- ✓ Cabana Club Party Lounger and Natural Stone Drink Table Assembly Instructions

If you have difficulty understanding any of the instructions and need assistance while fastening your components together, please call Tropitone's Customer Service Center at 949-951-2010.

### Tools Required

5/32" Hex Key (Allen Wrench)

Safety Glasses

### Half Panel Parts Lists

#### **5xxxHPFS (Flat Straight)**

- (4) Lower Brackets
  - (4) 1/4" x 1/2" Button Head Screws
  - (4) 1/4 Lock Washers
  - (4) 1/4" x 3/4" Button Head Screws
- Fabric Panels will use 6 of each

#### **5xxxHPFC (Flat Curved)**

- (8) Lower Brackets
- (8) 1/4" x 1/2" Button Head Screws  
(Use with Woven Panels)
- (8) 1/4" x 3/4" Button Head Screws  
(Use with Fabric Panels)
- (8) 1/4 Lock Washers

### Full Panel Parts Lists

#### **5xxxFPFS (Flat Straight)**

#### **5xxxFPLS (Fabric Only)**

#### **5xxxFPRS (Radius Straight)**

- (2) Lower Brackets
- (2) Upper Brackets
- (4) 1/4" x 3/4" Button Head Screws
- (4) 1/4 Lock Washers


#### **5xxxFPFC (Flat Curved)**

#### **5xxxFPFP (Party Lounger)**

- (4) Lower Brackets
- (4) Upper Brackets
- (12) 1/4" x 3/4" Button Head Screws
- (12) 1/4 Lock Washers



Lower

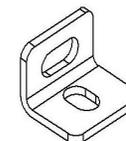

Upper

Tropitone Furniture Co., Inc.  
5 Marconi, Irvine, CA 92618

949 951 2010 phone  
[www.tropitone.com](http://www.tropitone.com)

Part # R9T00014  
Revised: 21314  
©2014 Tropitone Furniture Co., Inc.

## Configuration




### Panel Configurations

Cabana Club Modules		FPRS FPLS	FPFS	HPFS	FPFC	HPFC
5xxx11AC	Arm Chair	2	1	1	-	-
5xxx11AC	Arm Chair	-	-	4	-	-
5xxx10SC	Square Corner	1	1	2	-	-
5xxx10SC	Square Corner	-	2	2	-	-
5xxx10SC	Square Corner	-	-	4	-	-
5xxx10MC	Center Module	-	1	3	-	-
5xxx10MC	Center Module	-	-	4	-	-
5xxx17SO	Square Ottoman	-	-	4	-	-
5xxx10CC	Curved Corner	-	-	2	1	-
5xxx10CC	Curved Corner	-	-	2	-	1
5xxx08CO	Curved Ottoman	-	-	2	-	1

- ✓ The item quantities in each row indicate the maximum panel configuration.
- ✓ The total number of panels required varies depending upon your modular configuration.


## Step 2

With modules in an upright position, assemble panel by sliding the tightened lower brackets until they capture the frame.

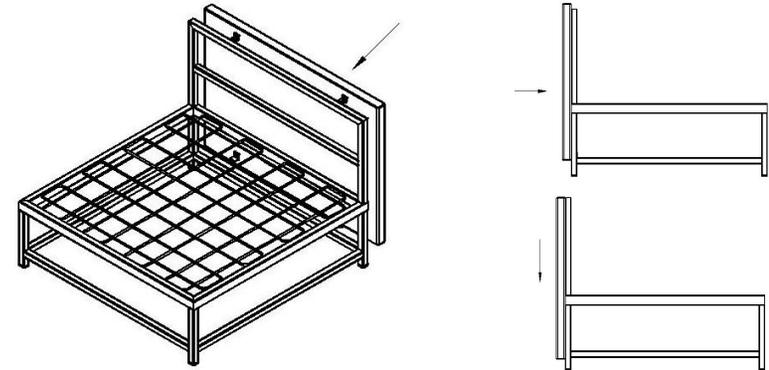

## Step 3

Rotate the upper (loose) brackets, install the lock washers and screws, and then fully tighten all the screws. Repeat for all panels. Brackets can be adjusted by loosening screws and moving up or down as necessary.

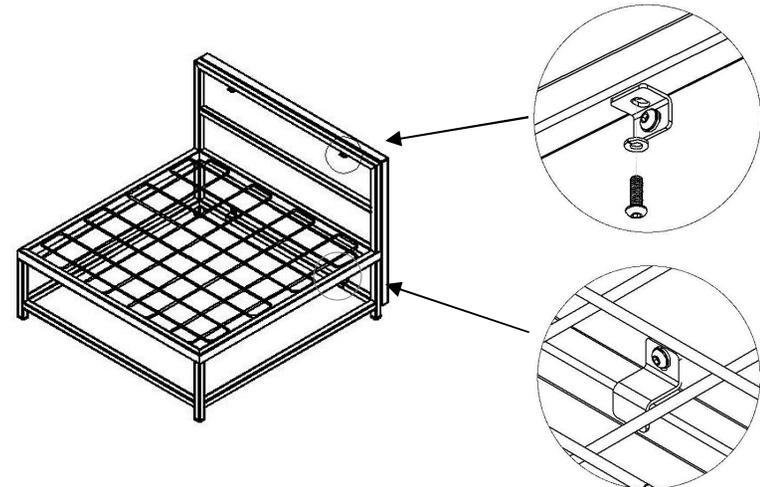


# Full Panel Assembly

## Step 1


Prepare a smooth, non-scratch surface (a tarp or pool towels can be placed on your work surface). Place the woven panels on prepared work surface and determine the panel top and bottom by measurement. The bottom of the Party Lounger panel has glides that contact the ground.

Connect lower brackets with lock washers and screws. Fully tighten the bottom brackets. Connect the upper brackets. **Don't fully tighten the upper brackets at this time.**

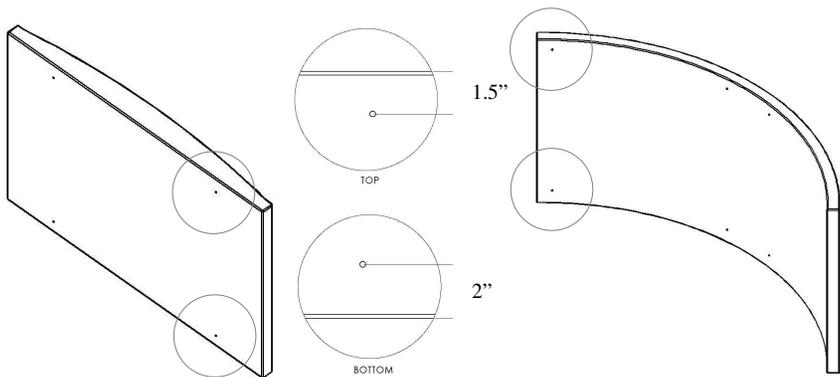

Connect brackets in 4 places.  
Fully tighten 2 bottom brackets.

Connect brackets in 8 places.  
Fully tighten 4 bottom brackets.

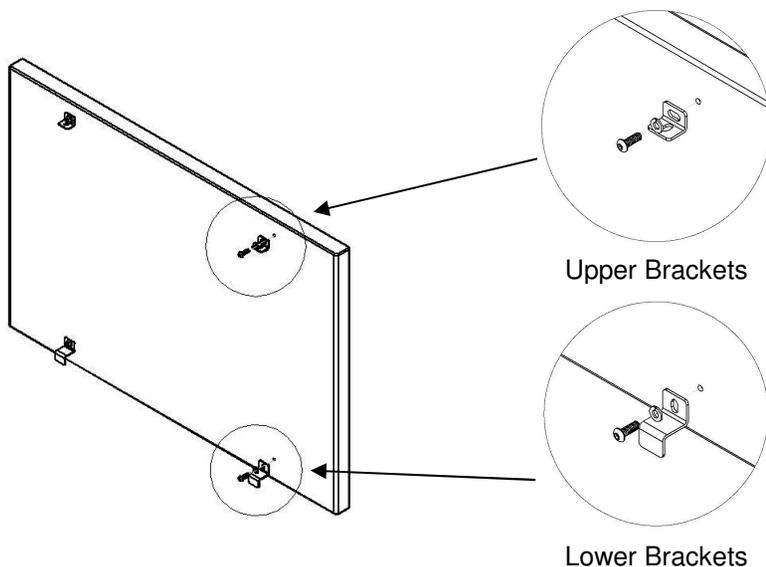


Upper Brackets

Lower Brackets


# Panel Types

Full Panels (FPxx) cover the full height of the module.

Half Panels (HPxx) cover the lower third of the module.

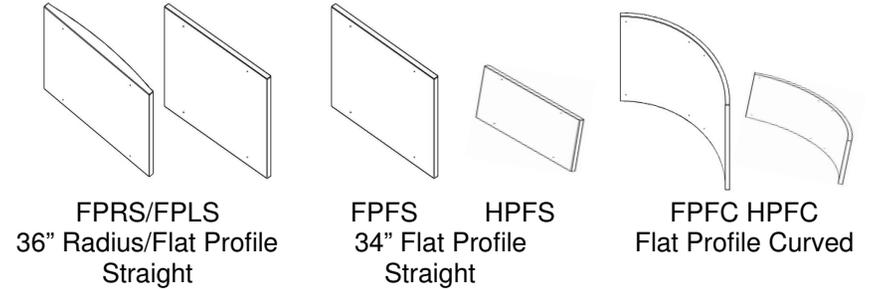


Radius Profile and Flat Profile panels are designed to fit together as a set.

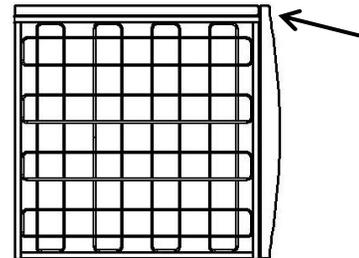

Radius panels overhang the end of the module to form a butt joint with the Flat panel making a finished seam.

\*FPLS fits the same but flat.

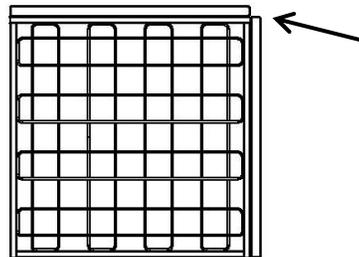

Two adjacent Flat panels leaves the corner open.


# Half Panel Assembly

Half panels should be connected to Cabana Club modules before modules are assembled together.

## Step 1

Prepare a smooth, non-scratch surface (a tarp or pool towels can be placed on your work surface). Place the woven panels on prepared work surface.

Connect brackets with lock washers and screws. Fully tighten the bottom brackets. **Don't fully tighten the top brackets at this time.**

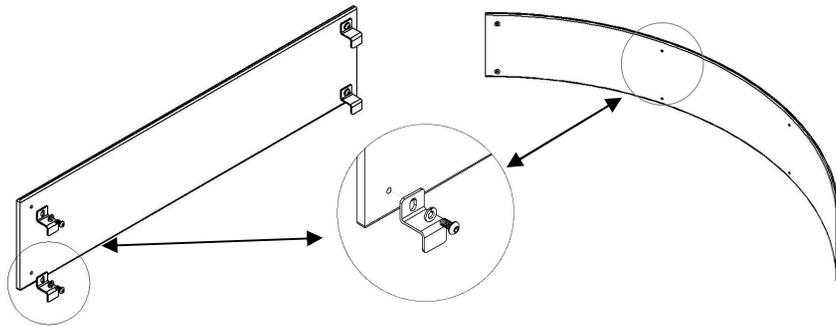


Connect brackets in 4 or 6 places.  
Fully tighten 2 or 3 bottom brackets.


Connect brackets in 8 places.  
Fully tighten 4 bottom brackets.

## Step 2

Frame modules can be placed upside down or on the side on the prepared work surface. Assemble panel by sliding until the tightened lower brackets capture the frame.

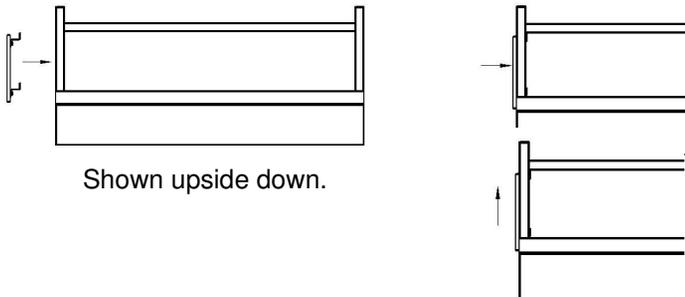


Shown upside down.

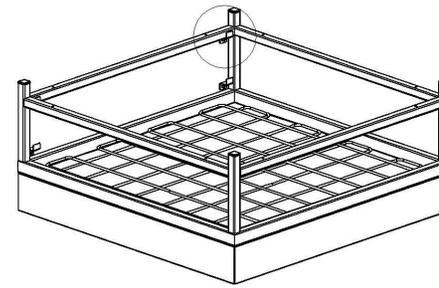


Bottom brackets have captured the frame.

## Step 3

Rotate the top (loose) brackets until they capture the frame and fully tighten the screws. See pictures for Stainless Steel and Aluminum Frame orientation for brackets. Repeat for all panels. Brackets can be adjusted by loosening screws and moving up or down as necessary.

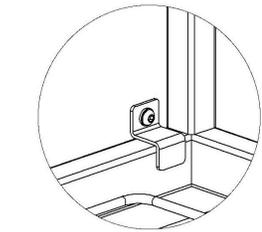

Stainless Steel  
Frame Connection

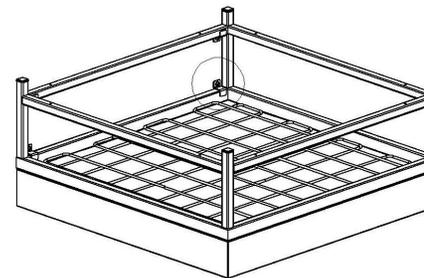

Aluminum Frame  
Connection

## Step 4

Turn furniture into an upright position. You can assemble components together if required (see separate Cabana Club Assembly instructions). Continue on to Full Panel Assembly if needed.